


- Check the standing and running rigging regularly, and at least once per year.
- For wire cables:
 - Change them as soon as the first frays appear
 - Check for corrosion, especially at the terminals with rigging screws.
 - Check the good condition of swages and rigging screws.
- For synthetic cables (Kevlar, Twaron, etc.) used for running backstays, halyards, sheets, docklines, etc.:
 - Change as soon as signs of fray or wear appear.
 - Regularly check the other elements of the rigging; sheets, docklines, etc.; and replace if worn.

2.4.2. Maintenance of the rigging:

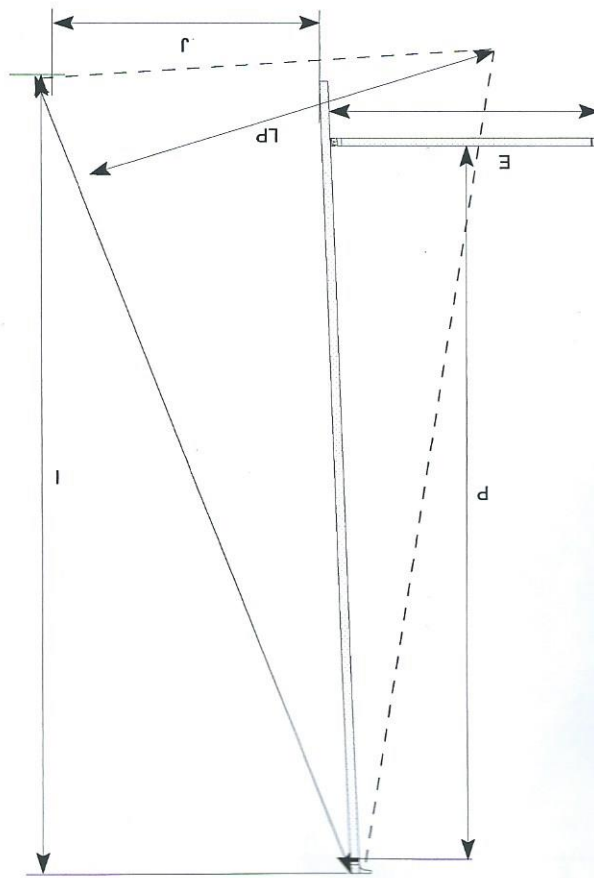

SAIL	
CLASSIC SAIL	AREA
MAINSAIL	26.24 m ²
GENOA (110%)	19.54 m ²
SPINNAKER	62.49 m ²

DIMENSIONS	
I	11.63 m
J	3.19 m
P	10.96 m
E	4.20 m

2.4.1. Characteristics of the sail plan:

2.4. Sails and rigging

FIRST 27.7